 




ELECTRIC GRIDDLE/GRILL

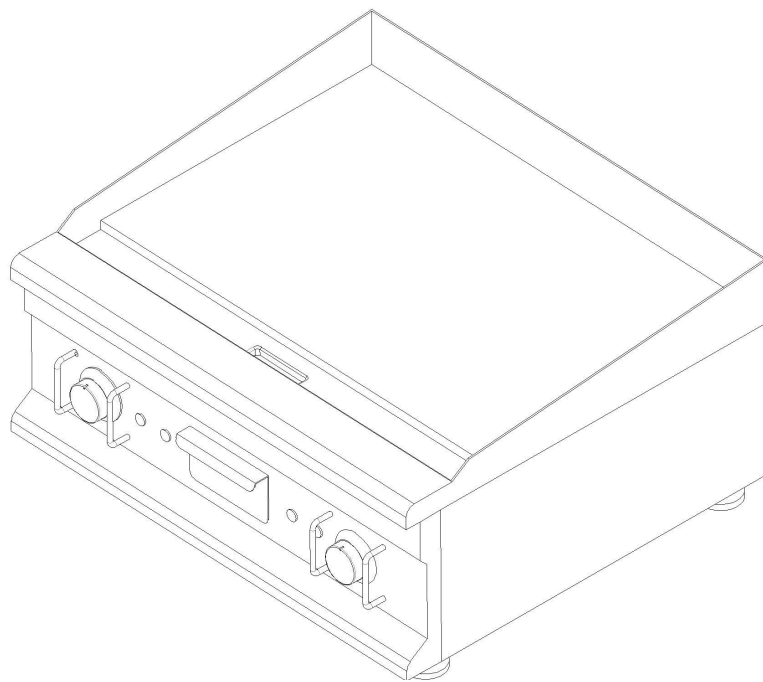

- ★ **ALL stainless steel construction**
- ★ **Automatic thermostat**
- ★ **High-efficient, easy operable & safe**
- ★ **Durable and elegant design**



Smoke may appear inside the machine when used for the first time. This is normal, resulting from moisture evaporation from the protective coating or heat insulation cotton under heating, and is not a product defect.

EG Series of Electric Griddle/Grill

I. Introduction:

EG Series of Electric Griddle is the new electrothermal product which is designed and developed with advance technology. It adopts the international popular style, body made by good quality stainless steel, luxurious and good-looking .The products are equipped with good quality electrical elements, so that they are energy-saving and safety. Be provided with thermostat function, easy control. EG Series of Electric Griddle/Grill is with comprehensive functions and high quality, therefore, it is the best choice for the hotels, restaurants, and west-style food shops, etc.

II. Operating Instruction:

Before use, please check whether the voltage of power supply is in conformity with that in the data plate. The body must be earthed properly. It is forbidden to put the tinder and explosive object near the machine. And keep it in the environment with the superior ventilation system.

CAUTION

Smoke may appear inside the machine when used for the first time. This is normal, resulting from moisture evaporation from the protective coating or heat insulation cotton under heating, and is not a product defect.

Operation Step:

1. Place the machine firmly, connect the power, and then the indication light is on green. Adjust the working temperature to the required one; now working light is on yellow, the heating plate is working. After tested, the user can re-adjust the thermostat knob; select the required temperature for working again.
2. When the temperature reaches the setting one, the yellow light will turn off, then it will turn into the thermostat state, the user can start to work. When the temperature comes down, the thermostat will start working again automatically. This process is cycling repeatedly; guarantee the temperature is on the set up scope.
3. The grill with two thermostats, the left one is controlling the left heating plate's temperature and right one is controlling the right heating plate, user can select each or both to use.
4. When the food is ok, the user can eat it after take out by the chopsticks, avoid to use metal to roll up or take out the food, otherwise it will hurt the surface of the heating plate.
5. The box of bottom can be collected the remaining oil of the heating plate expediently, it should be cleaned out frequently to avoid coming out.

III. Operating Instruction:

Model	Power	Input Power	Dimension(mm)	Net Weight
GPE410F	~230V,50Hz	2.5kW	415x500x255	29kg
GPE410G	~230V,50Hz	2.5kW	415x500x255	29kg
GPE410C	~230V,50Hz	2.5kW	415x500x255	29kg
GPE600F	400V 3N~,50Hz	5kW	600x520x310	33kg
GPE600G	400V 3N~,50Hz	5kW	600x520x310	33kg
GPE600C	400V 3N~,50Hz	5kW	600x520x310	33kg
GPE1000F	400V 3N~,50Hz	6kW	1000x520x310	50kg
GPE1000G	400V 3N~,50Hz	6kW	1000x520x310	50kg
GPE1000C	400V 3N~,50Hz	6kW	1000x520x310	50kg

IV. Repair and Maintenance:

 
1. Take out the plug before clean the machine.
2. After use for each time, please clean it with soft dry fabric, please use middle washing tank to clean if necessary, avoid using sharp metal, and strictly prohibit cleaning with water.
3. The remaining oil of the box in the bottom should be cleaned out frequently.

V. Notes:

1. When you use this machine, do not touch the electrical heating floor to avoid scald.
2. You should take out the plug or switch when the machine was stopped, it could avoid the accident happen. All safeguard maintain work should be in process after shut down the power supply. If the machine appears hitch, do not dismantle by yourself, please send to our agent or sales supplier for repair.

VI. Circuit Diagram:

GPE410F、GPE410G、GPE410C

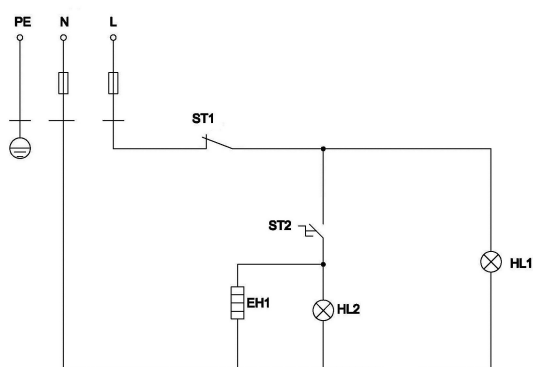

ST1: Security Thermostat

HL1: Power Indicator


EH1: Electric Heating Pipe

ST2: Temperature Controller

HL2: Heating Indicator

GPE600F、GPE600G、GPE600C

 GPE1000F、GPE1000G、GPE1000C

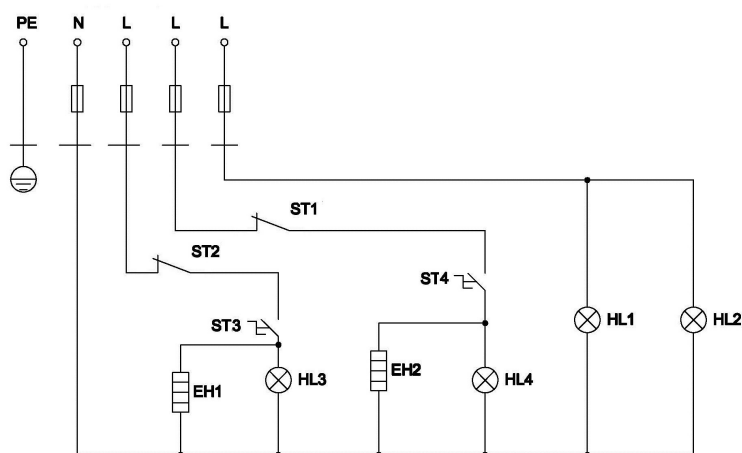

ST1、ST2: Security Thermostat

HL1、HL2: Power Indicator

EH1、EH2: Electric Heating Pipe

ST3、ST4: Temperature Controller

HL3、HL4: Heating Indicator

Troubleshooting

Trouble	Cause	Resolution
1. Shut on power switch K1, the indicator is not on.	1. Fuse of power switch is burned. 2. The connection of power cord is not well.	1. Replace a suitable fuse. 2. Firm power cord.
2. Yellow indicator is not off. The ascend of temperature can not be controlled.	1. The connection of indicator is wrong. 2. Temperature controller is out of action.	1. Correct it with right connection. 2. Replace temperature controller.
3. Indicator is not on, but temperature control is normal.	1. The contact of indicator is not well. 2. Indicator is burned.	1. Firm connection. 2. Replace indicator.

Packing list of leave factory

Name	Q'ty	Remark
Electric Griddle	1	
Operation Manual	1	

